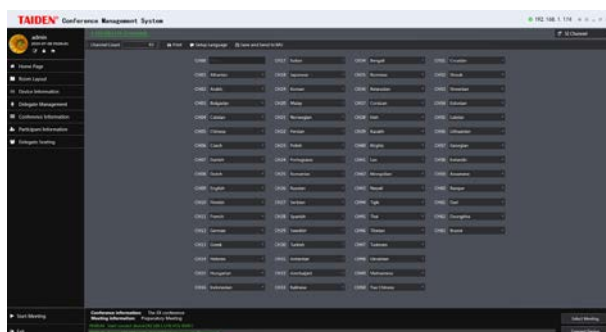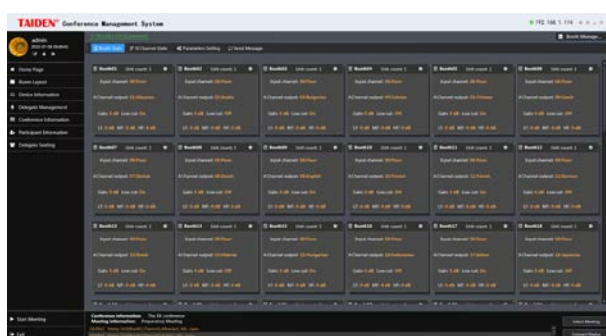# HCS-8516
Simultaneous Interpretation Software

Interpretation channel setup

Interpreter booth status

Functions

Set up the simultaneous interpretation channels and interpreter booth(s):

■ Simultaneous interpretation channel setup:
  ♦ Set the channel number and language for each channel and save into the database
  ♦ Set language and its abbreviation
  ♦ Send the configuration to the Congress Main Unit for synchronization
  ♦ Display Congress Main Unit configuration on the window

■ Set up interpreter booth(s)
  ♦ Set the number of interpreter booth, and save into database
  ♦ Set the outgoing for channel A, B and C of each booth
  ♦ Set the auto-relay booths for each interpreter booth
  ♦ Assign the interpreter booth afresh after booths combination
  ♦ Send configuration to the Congress Main Unit for synchronization

■ Manage interpreter booth: synchronously control and communicate with the booth during the meeting
  ♦ Booth status and Channel status
  ♦ Switch output channel
  ♦ Set up interpreter unit microphone parameters (Gain, EQ and Lowcut)
  ♦ Close interpreter unit microphone

Ordering Information

HCS-8516   Simultaneous Interpretation Software